

WeatherTech®


Easy-On™ Stone & Bug Deflectors

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic “brush-style” car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents **NOTE:** Actual product may vary from illustration.

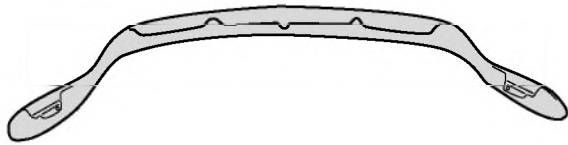

Hood Shield



Phillips Screw x2



Plastic Washer x2



Fastener x2



Bump On x4


Tools Required



Car Wash Supplies



Clean Towel

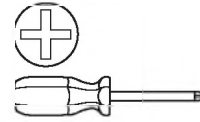


Phillips Screwdriver


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps **NOTE:** Actual application may vary slightly from illustrations.

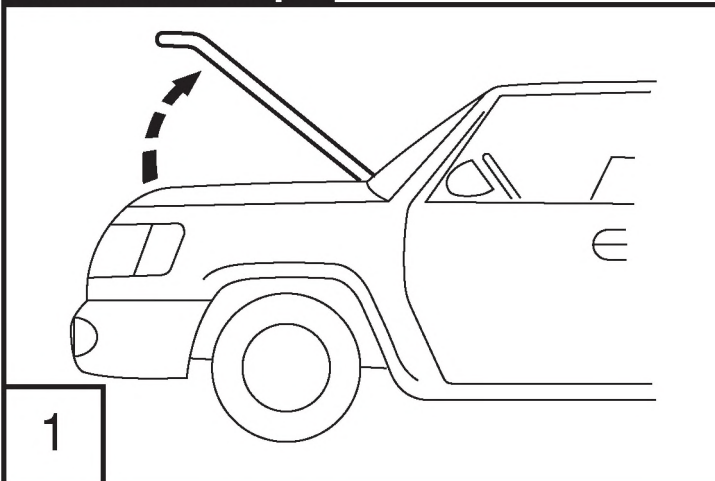

1

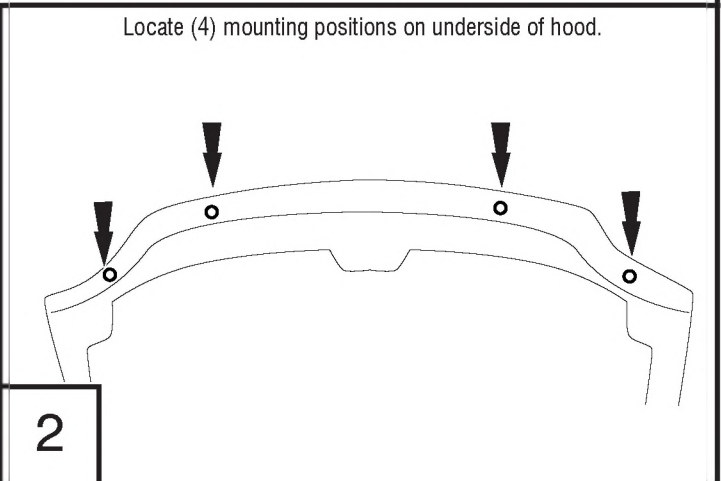


Locate (4) mounting positions on underside of hood.

2


Installation Steps

NOTE: Actual application may vary slightly from drawings.

Remove (2) fasteners which attach rubber trim to hood.

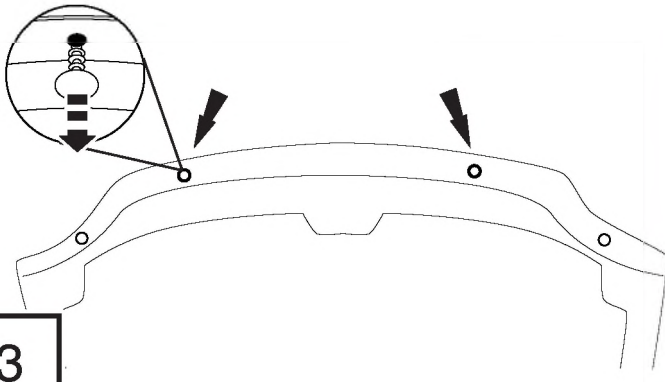


Align Hood Shield with holes in hood. The mounting flange of the hood shield is positioned **OVER** the rubber trim.

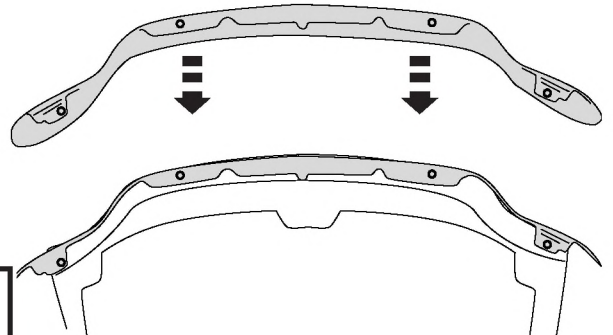


3

4

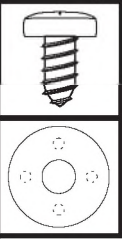

Install (2) screws with washers in the outboard mounting holes.

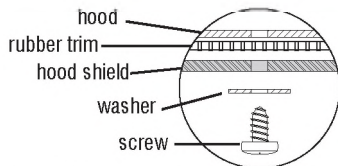


5

Do not overtighten




Install (2) plastic fasteners in the inboard mounting holes.

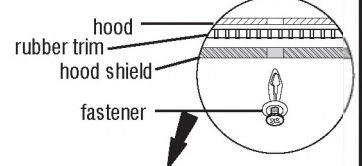

6



Do not overtighten

7

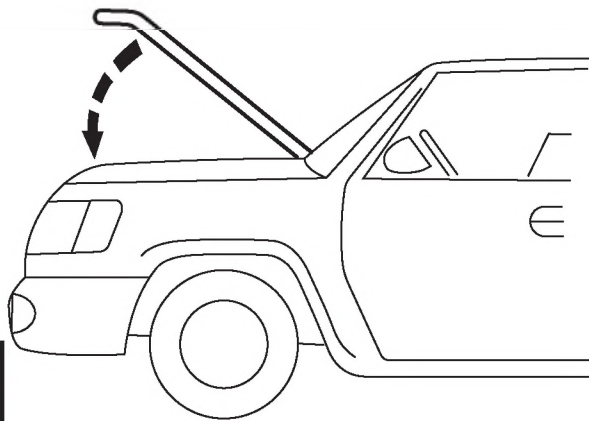

8

Install (4) bump ons.

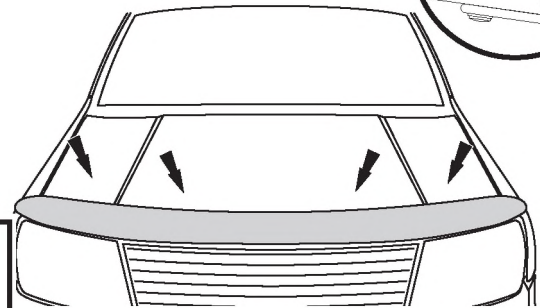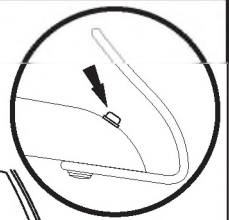

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



1 MacNeil Ct.

Bolingbrook, IL 60515

Questions? Call customer service @ 630.769.1500

Monday - Friday, 9 a.m. to 5 p.m. Central Time

www.WeatherTech.com