

# WeatherTech®

## Easy-On™ Stone & Bug Deflectors

### Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

### Contents

**NOTE:** Actual product may vary from illustration.



Hood shield




Bump Ons x4

### Tools Required



Car Wash Supplies

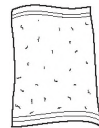

Clean Towel



Nut driver


### Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

### Installation Steps


**NOTE:** Actual application may vary slightly from illustrations.

Open hood.

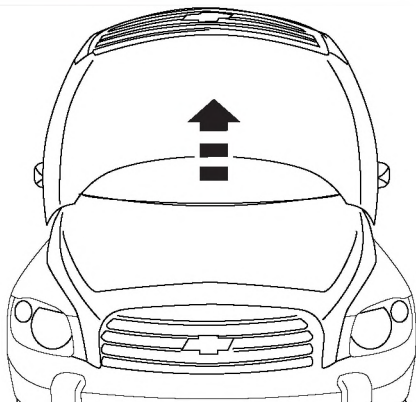

1

Locate and remove (2) rubber caps covering out-board grill mounting screws.

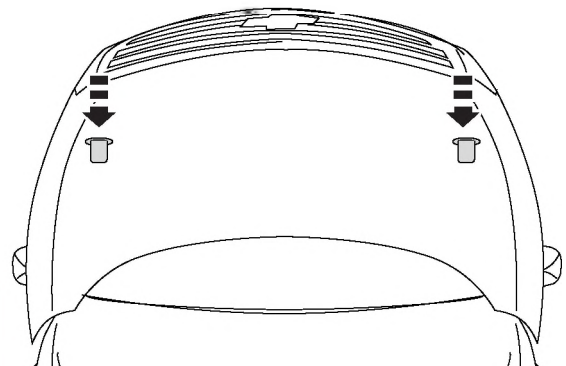

2


## Installation Steps

**NOTE:** Actual application may vary slightly from illustrations.




Remove (5) nuts from the backside of the grill that secure it to the hood. Carefully set grill aside.

3

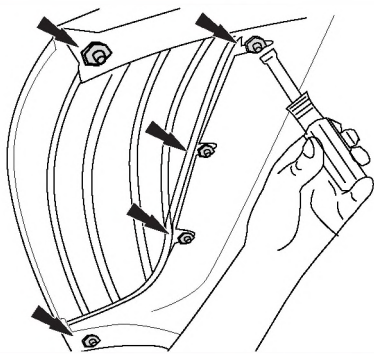


Align hood shield in place along the center of the hood edge.

4

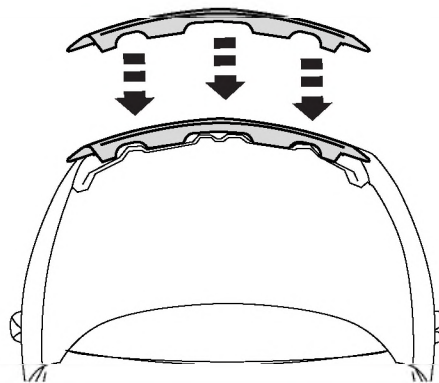

Replace grill assembly. The hood shield should be positioned **between** the hood and the grill.


5

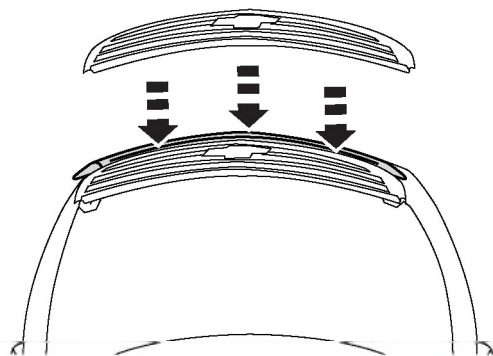

6




Reinstall (5) previously removed nuts on the backside of grill.

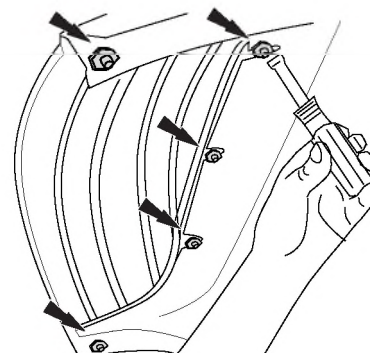

Replace (2) previously removed rubber caps on end nuts.


7

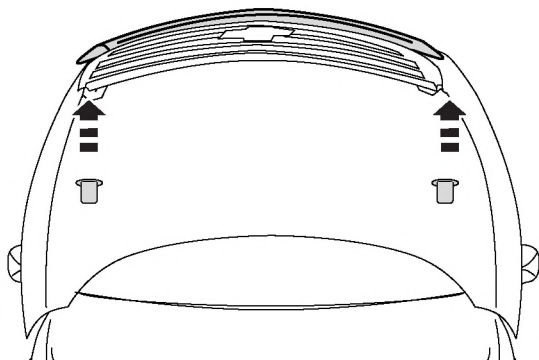

8



Close hood and install bump ons.

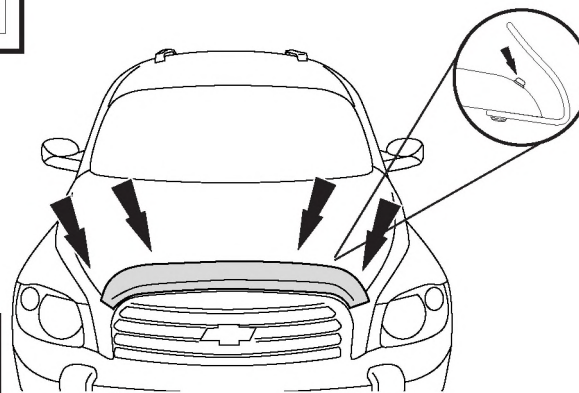

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



1 MacNeil Ct.

Bolingbrook, IL 60515

Questions? Call customer service @ 630.769.1500

Monday - Friday, 9 a.m. to 5 p.m. Central Time

[www.WeatherTech.com](http://www.WeatherTech.com)